

Home and Small Business Mini-PABX Kit

We want to thank you for purchasing the Mini-PABX Kit, it is a very powerful solution, but we want to warn you that it can only serve you properly if you pay attention to some very easy and simple rules.

WARNING!

If you read nothing else – please read this!

BEFORE YOU START: – make sure all incoming lines are working. The simple approach is to connect one of the 3 x Phones directly to the incoming line, if it does not work then there is no point in going further until you find where the incoming line is and you can access it. You need to test all incoming lines and be confident they work before you continue.

Remember: A little time spent understanding the basics can have you up and running in about ½ an hour or less.

The 3 x Phones supplied do not need batteries, all the functionality is supplied over the cable from the Mini-PABX; however if you want the back-light to light up the display then you do need batteries. Batteries are supplied; we include 3 x Alkaline batteries for each Phone, but the battery manufacturer is responsible for their quality and we can not guarantee them. Always use Alkaline or high quality batteries as leaking batteries can ruin the phone(s) and is not warranted.

1. Basic Set-up:

First: Connect your incoming phone-lines to the main incoming lines on the Mini-PABX, these can be hard to see and can be Embossed on the plastic surface labelled Line1, Line2 (optionally), Line3.


(please note that Line3 will not appear on a 2-Line model, leaving a space).



Connecting to the Exchange Line:




Depending on the type of wall socket, you may need an adaptor as shown above for each exchange line coming into your premises. Adapters are supplied just in case you need them. Connect the other end of these cables to the Mini-PABX as shown here:

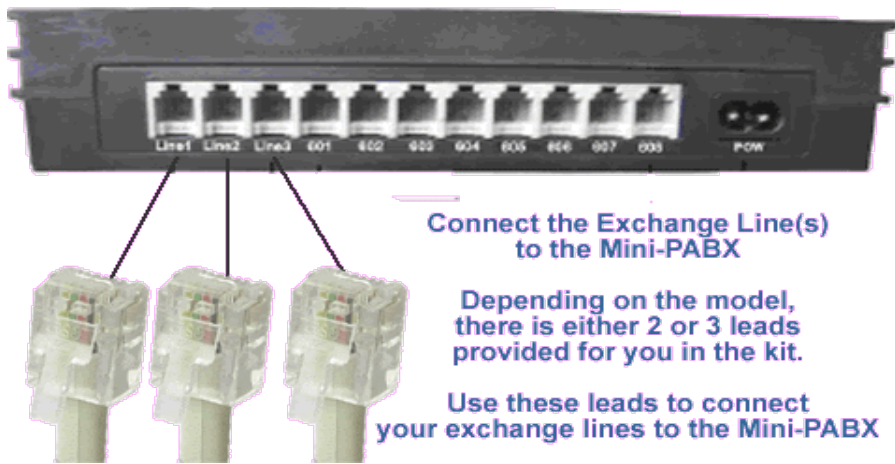

Second: Please making sure that a phone (becomes “Phone-1”) is connected to extension 601; this is the “First Extension Phone” or Phone-1 (Ext-1) and is used for programming the unit if you want to change the way it works.



Next: Connect your other extension Phones to the remaining connections as shown in the following illustration. If you have a 206 model, there is a space between the incoming lines and the extensions (6 extensions instead of 8).

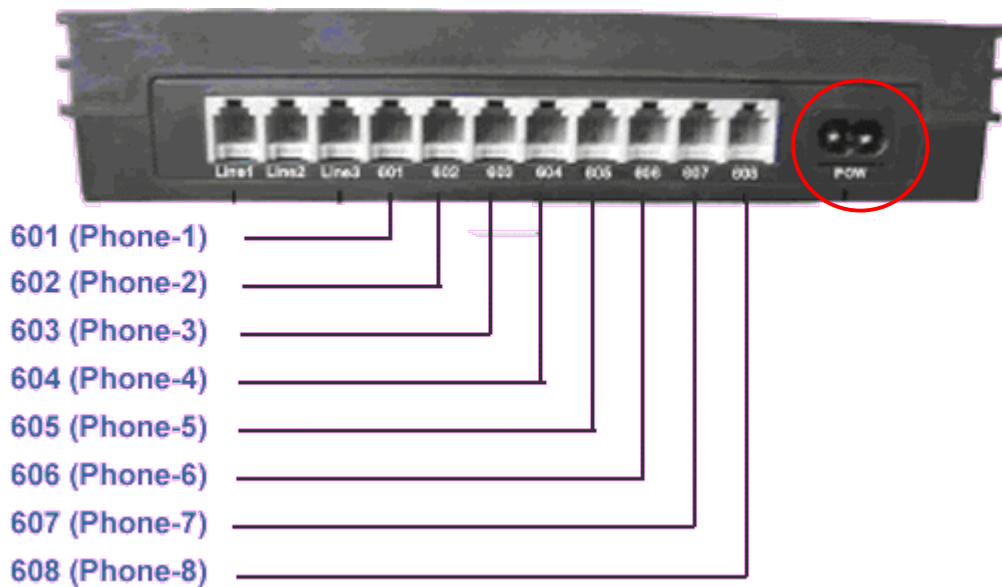

Finally: Connect the power cable to the Mini-PABX (Circled in **Red** on the right side of the image above) and then to the power-outlet. After checking that all the above is correct, switch on the power to the Mini-PABX.

Before you do any more, now is a good time to test the system.

Test-1: Pick-up Phone-1 (connected to port 601) and dial 602. Extension 602 will ring and you can answer, then hang-up both phones.

 
Test-2: Pick-up Phone-1 again, dial 602 and when you answer this time, press the “Transfer/Flash” button and dial 603, and you will see how you can put a internal-call on-hold and redirect it to another extension. Answer Extension-3 (603) and then hang-up 602 and at this stage, Phone-1 (601) is redirected to Phone-3 (603). You will see that it works well and is easy to learn.

Note: “Hold” is a “local-hold” and is referred to as “exclusive-hold” which puts the caller on-hold with musical bells for that extension, and the extension that puts the call on-hold must also take the caller off-hold, this is convenient when you need to talk without the caller hearing the conversation.

To transfer to another extension, there is a button marked “Transfer” or “Flash”, this button is in the top left-hand corner of the Phone just above the “1” key.

That's it! Unless you want to change the way it functions, you can skip the programming section, but take a quick look at “Basic Functions” on Page-5.

Note: When the power fails, you automatically have stand-by calls just like on a normal telephone. The first line will operate through Extension-601, and the second line will operate through Extension-602, and if you have a 3-Line model, then you can have a third line operate on Extension-603.



**DEPENDING ON THE MODEL, ALL LINES MAY NOT FUNCTION
UNLESS BASIC PROGRAMMING IS COMPLETED.**

**IF ALL LINES DO NOT WORK, YOU CAN ENABLE THEM WITH
BASIC PROGRAMMING - IT'S EASY!**

Basic Programming (do not do this unless you have to):

Before you start programming, ensure you have connected your first phone to the port marked 601, this is referred to as Extension-1 or Extension 601 and is the first of 6 or 8 phones you can have on your Mini-PABX.

N.B. If at any time you feel you want to start again, you can reset to Factory Defaults by the command **0000#** (first Enter Program Mode – see below)

Enter Programming Mode:

Pick up Extension-1 (601)

Key-in (Type) *** # *** on the phone keypad, after a second you will hear a short but steady tone (a “long beep”) from the earpiece, this means that the Mini-PABX is now in programming-mode and not user-mode.

If you do not get a steady tone, but instead get 3 short beeps, you have miss-keyed the entry and need to try again.

Flash Time (see below for explanation):

If you understand “Flash” Time, then for Australia it's 100 m/Seconds, and to make sure it is set correctly, immediately after going into program-mode (***#***) enter **002#** and wait for the tone, then replace the receiver.

After setting the flash-time, the Mini-PABX is set correctly for Australia's standard Flash-Time, and you should never have to repeat this setting.

What's Flash-Time?

In plain non-technical language, Flash-Time is the time allowed before the telephone provider exchange decides that you have hung-up the call. That is, if you put the handset back into the cradle, the telephone exchange knows that the call has ended, and the call will be terminated.

However, with a Mini-PABX you will often want to place the handset in the cradle and leave the call connected (with Music-on-Hold) to you, or connected to another extension, or even for a conference with two extensions and the caller.

Therefore, the “Flash Time” is the delay-time before the line is cut. During this time, the Mini-PABX can perform certain duties, mainly put the call “on-hold” (with “Musical Bells”).

Enable Lines:

Before you can use the additional lines as a Mini-PABX, you may need to activate Lines by first entering the programming mode again (as above with ***#***) then you can “turn on” (activate) the line(s) by entering **0601#** (hear tone) **0602#** (hear tone). If you have the 308 model, the third line is activated by entering **0603#** then after hearing the tone, hang up.

Note that you do not have to keep entering the programming-mode code, you can do all in one step as follows: ***#*** (hear tone) **0601#** (hear tone) **0602#** (hear tone) **0603#** (hear tone), then hang up to finish the programming-mode and default back to user-mode.

If you do not hear the tone (steady) but get 3-Beeps, then that means you have mis-keyed the code, or hanging-up took you out of the programming mode, so either press ***** and re-key the code, or ***#*** to re-program.

Explanation:

In the above case, the programming is a simple code (**06** for Activate-Line) and **01**, **02** or **03** to tell the system which line you want to activate. The **#** is to tell the system that you have finished that particular programming sequence.

If you are NOT in programming-mode, when you key-in **0603** it will think you are dialling a number starting with 0603, but when you press **#** it will complain. No damage will be done if you do this, but nothing will happen either.

Basic Functions:

Depending on if you have more calls outward on the Exchange Line(s), or if you call extensions more often, you set the Mini-PABX to suit your best need:

If you make more calls to Extension Phones, then you should accept that to dial 9 to get an outside line, will be best suited for you.

If you make more calls outward than you make to Extension Phones, then you can have “Direct Dial Out” without the need to dial 9, would suit you best.

If you want all phones to be set to dial out directly, then after entering programming mode again (***#***), key-in: **20#**

If this command is entered, then all calls outward from all extensions will be direct (just dial the number) but between phones on the system (intercom) you will need to first prefix the phone extension number with an asterisk (*****)

e.g. When programmed to “Direct Dial”, if you want to call internally to (say) extension 605 just pick up the receiver and dial ***605**

2 x Dialling-Type Settings:

Direct Dial Out allows you to dial an outside number by simply entering the phone number you are calling, but you have to add an asterisk (*) before you can call an Extension Phone.

Indirect Dial Out means that you need to dial 9 before you can dial an outside number, but you simply enter the Extension Phone number (601 through to 606 or 608) to use the in-office intercom facilities.

Dial Tones:

The unit has 2 dial tones, an Internal tone to work between phones on the Mini-PABX and an external tone for calling out.

In standard default programmed state, you can dial out directly from the first extension **601** but from all other lines you must first call up an external line by pressing the number **9**. This suits most situations with a receptionist.

To call another phone on the system (internal phone call) just key-in the extension number after picking up the phone, that line will then ring.

Types of Phone:

You already have 3 high quality Caller ID Phones with Hands-Free and optional blue back-light. With these supplied phones, just press the **HF** (hands free) button on the phone and key-in the extension number.

Hands-Free Warning:

Hands-Free use can not be adjacent to each other, they are bidirectional and will automatically adjust for noise, if they are in close proximity of each other then this can cause feed-back creating a high pitch noise.

Additional Extension Phones:

You can add almost any approved Single Line Telephone or Cordless Phone to the system, maximum number of phones is 6 or 8 depending on the model. You can order one or more additional matching phones from your dealer.

Call Transfer:

To transfer a call just tap the hook key where the handset rests (or press the Transfer/Flash Button) and type the extension you wish to send the call to.

===== Programming Examples =====

Example 1:

Small office with 2 lines and 6 extensions. All phones to ring:

To program up:

Enter program mode ***#*** Enable line 2: **0602#**

To force all 6 phones to ring when there's a call on Line-1:

3110# 3120# 3130# 3140# 3150# 3160#

To force all 6 phones to ring when there's a call on Line-2:

3210# 3220# 3230# 3240# 3250# 3260#

Example 2:

In a small home/business the business line is usually line 1, and it rings on the office phones (601 and 602). The home phone is not only a home line but also used as a second line in the office to dial outward, and that will keep the incoming line free for customers to call.

In this situation, 5 phones are used in total, 3 are in the office (601, 602 & 603) and 2 in the house (604 & 605), both house and office can call out on either line.

To program up:

Enter program mode: ***#***

Enable line 2: **0602#**

Direct dial out on all lines: **20#**

Force Extension-3 (603) to ring additionally on Line-1: **3130#**

(Extensions in the house do not ring)

To make all calls in on Line-2, go to Extension-604: **3240#**

To make all calls in on Line-2, go to Extension-605: **3250#**

To disable any Extensions in the Office from ringing when Line-2 has a call:

Stop Extension-1, 2 and 3 (601, 602 and 603) from ringing for Line-2:

3211# 3221# 3231#

Explanation:

First digit (3) is a "Ring/Don't-Ring" command, the second digit (2) is the Exchange-Line Number, The 3rd digit (1, 2 or 3) is the Extension (601, 602 or 603) and the last (4th) digit is '1' for "Do not ring" ('0' for "Ring")

That is, there are 4 digits followed by # :

First digit is always '3' (Ring/Don't-Ring command)

Second digit is Exchange Line Number (1, 2 or 3).

Third digit is the Extension Number (1 for 601, 2 for 602, 3 for 603 etc).

To make it ring: just make the last (4th) digit a '0'.

To stop it from ringing: just make the last (4th) digit a '1'.

===== Problem Solving =====

Can not dial-out on Line2 (or Line3):

You should run through “Enable Lines” on Page-5

===== Answering Calls =====

Can only answer call from Phone-1:

This is the default setting where Phone-1 (Ext-601) is set to “Direct-Dial” for a general receptionist situation, this allows the receptionist to answer all calls by simply picking up the Extension-1 Phone (601). However the other extensions (e.g. 602, 603, 604 etc) are set to Indirect-Dial and those extensions need to press * 9 to answer a call.

All extensions can be made Direct-Dial, see “Basic Functions” on Page-5.

Particular extension Direct-Dial can change only the extensions you want to be able to answer (Direct-Dial-Out allows Direct-Answer) as follows:

First remember to go into Programming-Mode by ****#**

Then the format is: **2N0#** where “N” is the extension you want to be Direct-Dial

Therefore, as Extension 601 is already Direct-Dial, you might want Extension 602 to remain as Indirect-Dial but Extension 603 to become Direct-Dial the same as Extension 601, you would key-in **230#**

Explanation (of the command):

“2” = Command for Direct-Dial, “3” = Extension-3 (603), “0” = Direct-Dial (or “1” for Indirect-Dial) and “#” to end the programming.

Note-1:

Any extension using Direct-Dial, can directly dial-out and directly pick up a incoming call without pressing any additional keys. However, to transfer they need to press * then the Extension number (e.g. * 605 for Extension-5).

Any extension using Indirect-Dial, needs to press “9” to get a line and * 9 to pick up an incoming call. However, to transfer they need only press the Extension number (e.g. 605 for Extension-5).

Note-2:

The above is for Operator Attendant only, if you implement Auto Attendant (with voice message instructing the caller what to do) then the functions change.

Auto-Attendant is similar but a # is additional. That is, to answer a call while the Auto-Attendant is working and set to Direct-Dial, they need to key * # 9